

How to Use Infusible Ink Transfer Sheets with Fabric Items

What you need

- Cricut Maker cutting machine
- StandardGrip Machine Mat (green)
- Cricut EasyPress
- Cricut EasyPress Mat
- Fabric item that is white or light colored polyester (at least 65% polyester), Cricut Infusible Ink Blanks, or other items listed as sublimation blanks. If you need the most vibrant fabric design, use 100% polyester white fabric.
- Infusible Ink Transfer Sheet
- Heat Resistant Tape (optional)
- Butcher paper
- White cardstock (80 lb.)
- Lint roller
- Scissors
- Design Space software on computer



*All time and temp settings listed in these step-by-step instructions are for Cricut EasyPress 2. See the Cricut Heat Transfer Guide at [cricut.com/heatguide](https://www.cricut.com/heatguide)

Cut your design




Place Infusible Ink Transfer Sheet onto StandardGrip Mat, shiny liner side down.



In Design Space, select and size your design to fit on your fabric item.

Note: Be sure to **Mirror** your design.

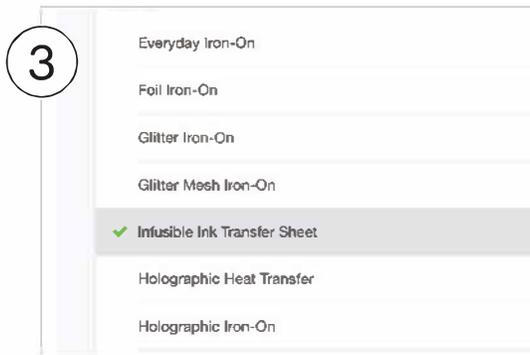

Click the **Make It** button. Select Browse all materials, then Infusible Ink Transfer Sheet.



Load mat and blade into machine, then press flashing **Go** button.

Weed your cut design



Remove cut design from mat and trim away unused area of sheet. Gently roll cut design so cut lines separate and are more visible. "Cracking" the cut this way makes it easier to remove excess paper from in and around your design.



Use your fingers or tweezers to carefully remove the negative pieces from in and around your design, leaving design on liner. Trim clear liner so it does not extend beyond Cricut EasyPress heat plate.

Apply your design



For this project, set EasyPress to 385° F for 15 seconds.

Tip: For precise temp, time, and pressure settings for your project, always refer to the Cricut EasyPress Heat Transfer Guide at [cricut.com/heatguide](https://www.cricut.com/heatguide).



Place fabric item on top of Cricut EasyPress Mat. Position sheet of white cardstock inside item to protect your mat and project.



Do not skip this step: Use a fresh adhesive to lint roll the entire surface. Even small debris or fibers can cause imperfections in the final transfer.



Cover item with butcher paper.



Do not skip this step: Preheat application area to remove moisture and wrinkles to avoid unwanted effects. For this project, press at 385° F for 15 seconds. Remove butcher paper and let item cool completely.



Place design face down on item with clear liner on top.

7



Place butcher paper on top of the design.

8



Press at 385° F for 40 seconds. Press the green C button to start the timer countdown.

Important: Do not move your hands or slide Cricut EasyPress during transfer. Stay still while pressing.

9



When beep sounds, slowly lift press. Try not to move the stack, including butcher paper. Let project cool completely. Once cool, slowly remove butcher paper, then slowly remove the liner.

Important: If design separates from liner and remains on blank, remove with tweezers. Do not remove it using your fingers. This could cause an unwanted effect like ghosting or marbling.

Tip: Never reuse butcher paper for another project.

10



You did it!



CARE: Machine wash inside out with cold water and mild detergent. Tumble dry low or line dry. Do not use fabric softener, dryer sheets, or bleach.